

پارس ارتباط افزار نماینده رسمی توزیع سیستم های نظارت تصویری در ایران

چگونه تاریخ و ساعت دستگاه و دوربین را تغییر بدهیم؟

مقالات آموزشی پارس ار تباط افزار برای سیستم های نظارت تصویری



www.pars-e.com

www.pars-e.

التعاط





EAGATE

چگونه تاریخ و ساعت دستگاه و دوربین را تغییر بدهیم؟

با استفاده از مرور گر اینترنت اکسپلورر (IE) وارد منوی دستگاه شوید.

Western Digital. ISROCK HILOOK MERCUSYS Odigived noffos

work Video Recorder				P	νīΖ
itibaniiii 👜 🎲					
					4
					<u>∳ ? X ⊕ ≡</u>
					Preset1 0 0
					Preset2
				>	Preset3
				•	Preset4
					Preset5
					Preset6
					Preset/
					Preset9
					Preset10
					Preset11
					Preset12
					Preset13 Preset14
]• ta• 🖞•		6 0 6 0	← → ≪ - 53	Preset15
		@Hikvision Digital Technology Co.,	td. All Rights Reserved.		
		ا انتخاب كنيد.	system settings	conf قسمت	رگ figuration
http://192.166.33.21/d/ <i>VISION</i>	oc/page/config.asp Live View Playba Basic Information Time	ا انتخاب کنید. <u>Pool</u> Configuration × Kk Picture Configuration Settings R232 R5485 Meru Output	system settings	conf قسمت ∗ ±	figuration
 http://192168.33.21/d VISION Local System 	sc/page/config.asp Live View Playba Basic Information Time Device Name	. عند بالتخاب كنيد.	system settings	conf قسمت ۱۳۰۰ ع	figuration
€ http://192168.3321/d VISION Local System System Settings	sc/piss/config.asp Live View Playba Basic Information Time Device Name Device No.	A c C Configuration × c Configuration × c Configuration × c Configuration settings R522 R5485 Menu Output Network Video Recorder	system settings	conf قسمت ۱۳۰۰ ع	figuration
kttp://192168.33.21/d kttp://192168.33.21/d VISION Local System System System Maintenance	sc/psgs/config.asp Live View Playba Basic Information Time Device Name Device No. Model Noteki bio	A - C Configuration × c Configuration × c Configuration × c Configuration setting R322 R5485 Menu Output Network Video Recorder 255 DS-77716II-E4	system settings	conf قسمت ۱۳۰۰ ع	figuration
	ec/piso/config.asp Live View Playba Basic Information Time Device Name Device No. Model Serial No. Firmagie Version	۸. عند الختاب التخاب التعامية ۸. مند الختاب التعامية ۸. مند التعامية	system settings	CONf قسمت ۱۳۰۰ ع	figuration
	ec/page/config.asp Live View Playba Basic Information Time Device Name Device No. Model Serat No. Firmaare Version Encoding Version	۸۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰	system settings	conf قسمت ۱۳	figuration
	ec/page/config.asp Live View Playba Basic Information Time Device Name Device Name Device Name Serait No. Firmaare Viersion Encoding Viersion	۸۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵ ۲۰۰۵	system settings	Conf قسمت ۱۳	figuration
	ec/page/config.asp Live View Playba Basic Information Time Device Name Device N	۸ ۲ ۲ ۲ ۲ ۲ ۲ ۲ ۲ ۲ ۲ ۲ ۲ 1 1 ۲ ۲ ۲ 1	system settings	CONf قسمت ۱۳	figuration
	ec/page/config.asp Live View Playba Basic Information Time Device Name Device N	Configuration × Configuration × KK Picture Configuration Settings R522 R5485 Menu Output Network Video Recorder	system settings	CONf قسمت ۱۳	figuration
Control Contr	Ec/page/config.asp Live View Playba Basic Information Time Device Name Device Name Number of HDDS Number of Alam Input	Configuration K Configuration K Configuration K Configuration K Configuration K Configuration Stimps R5322 R5485 Menu Output Network Video Recorder 255 DS-7716NI-E41 E26151123AARR557727224WCVU V V54.80 build 160716 V5.0 build 160716 V4.0 1 build 160714 V3.0.6 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	system settings	CONf قسمت ∗ ع∩	figuration n * 3 an • Help Er Logout
Comparing Control of	Ec/page/config.asp Live View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Device Name Device Name Device Name Device Name Serato No. Firmaare Version Plugin Version Plugin Version Number of HDDs Number of Alarm Input Number of Alarm Input	Nord Configuration × KK Picture Configuration KK Picture Configuration Satting R5322 R5485 Menu Output Network Video Recorder	system settings	CONf قسمت ∗ ء۳	figuration n * 0 an • Help E- Logout
Camera Management Sorage Event Storage Vehicle Delection VCA	ec/page/config.asp Live View Playba Basic Information Time Device Name Device N	Nord Configuration x Kk Picture Configuration Satting R322 R5485 Menu Oudput Network Video Recorder	system settings	conf قسمت ∗ ء	figuration
Http://1921663321/d Http://1921663321/d VISION Local System System Settings Maintenance Camera Management Cuera Management Cuera Management Storage Event Storage Vehicle Detection VCA	ec/psge/config.asp Live View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Serial No. Erromare Version Robert of Names Number of HDDS Number of HDDS Number of Alarm Input: Number of Alarm Output.	Pick Configuration × kk Pickare Configuration settings R5322 R5465 Menu Output Network Video Recorder 255 257716NI-E44 255 DS-7716NI-E44E00151123AARR557727224WCVU V3 4.80 build 160716 2 V3 4.80 build 160716 2 2 2 1 16 2 2 2 16 2 2 2 2 2 16 2 2 2 2 2 2 16 2 <td>system settings</td> <td>conf قسمت ۳</td> <td>figuration</td>	system settings	conf قسمت ۳	figuration
http://192166.33.21/d/	ec/psge/config.asp Live View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Serial No. Encoding Version Number of Namelso Number of Namelso Number of Alarm Input: Number of Alarm Input: Number of Alarm Output.	Pick Configuration × kk Pickure Configuration kk Pickure Configuration Settings R5322 R5485 Menu Output Network Video Recorder 2 2 DS-7776NI-E4E1620151123AARR557727224WCVU V3 36 build 160716 V3 0.6 6 2 2 1 16 2 1 1 16 2 2 2 2 1 1 2 2 2 1 1 2 2 2 1 1 2 2 2 2 1 1 2 2 2 2 2 2 2 1 1 2 3	system settings	conf قسمت ۳	figuration
http://192166.33.21/d/ VISION Local System System Settings Maintenance Camera Management User Management User Management Storage Event Storage Vehicle Detection VCA	Sc/psge/config.asp Live View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Serial No. Firmware Version Serial No. Firmware Version Plugin Version Number of Channels Number of FIDDs Number of FIDDs Number of FIDDs Number of FIDDs Number of FIDDs	Picko Configuration x kk Pickor Configuration kk Pickor Configuration settings R5322 R5485 Methods Kideo Recorder 2 255 95.771611-E4 95.771611-E4 95.771611-E41620151123AARR557727224WCVU V3.4 80 build 160716 4 V3.0 6 6 2 1 1 16 1 1 1 16 1 1 1 16 1 1 1 16 1 1 1 16 1 1 1 16 1 1 1 16 1 1 1	system settings	conf قسمت ۳	figuration
http://192166.33.21/d/ VISION Local System System Settings Maintenance Camera Management User Management User Management Storage Event Storage Vehicle Detection VCA	Sc/psge/config.asp Live View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Device Name Serial No. Firmware Version Plugin Version Plugin Version Plugin Version Number of Chamelis Number of Alarm Input Number of Alarm Output	PCC Configuration × xck Picture Configuration xck Ristar Configuration xsettings Ristar Ristar Sestings Ristar Method Video Recorder 255	system settings	conf قسمت ۳	figuration figur
Impr/192166.33.21/d X/SION Local System System Camera Management Gamera Management User Management User Management User Valei/Audio Image Event Storage Vehicle Delection VoA	Ec/psge/config.asp Live View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Device Name Serial No. Firmware Version Plugin Version Plugin Version Plugin Version Number of Chamelis Number of Alarm Input Number of Alarm Output	PCC Configuration × xck Picture Configuration xck Ristar Configuration settings Ristar Ristar Settings Ristar Description DS-7716NLE4 DS-7716NLE4 DS-7716NLE4 DS-7716NLE4 DS-7716NLE4 DS-7716NLE4 DS-7716NLE4 Distar 2 10 1 1 16 1 1 16 1 1 16 1 1 16 1 1 16 1 1	system settings	conf قسمت ۳	figuration figur
Carles C	Sc/psge/config.asp Live View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Serial No. Firmware Version Plugin Version Plugin Version Plugin Version Number of Channelis Number of FADDs Number of Alarm Input Number of Alarm Output	PCC Configuration × xck Picture Configuration xck Ristar Configuration Settings Ristar Ristar BS-7776NI-E4 DS-7776NI-E4481620151123AARR557727224WCVU V V3.4.30 build 160716 - - V3.0 build 160716 - -	system settings	conf قسمت ۳	figuration figur
	bolypsgelconfig.asp Live View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Device Name Serial No. Firmware Version Firmware Version Plugin Version Number of Alarm Input Number of Alarm Input Number of Alarm Duput	PCC Configuration × VX Picture Configuration Setting R322 R5486 Menu Outbut Network Video Recorder 255 57715NL-E4 597715NL-E4 DS-77715NL-E4E1620151123AARR557727224WCVU V3.4 80 build 160716 - - V3.0 build 160716 - - - - V3.0 build 160716 - - - - 1 - - - - - 16 - - - - - - 4 - - - - - - -	Update	conf قسمت ∞ ع	figuration
http://192166.33.21/dk VISION Local System System Camera Management User Management User Management Video/Audio Image Event Storage Vehicle Detection VidA	bolpsgelconfig.asp Like View Playba Basic Information Time Device Name Device Name Device Name Device Name Device Name Serial No. Firmware Version Firmware Version Rubor of Namels Number of Alarm Input Number of Alarm Input Number of Alarm Oxput	L.S.L.S.L.S.L.S.L.S.L.S.L.S.L.S.L.S.L.S	Update	conf قسمت ∞ ع	figuration figur
	bolpsgeloonfig.arp Like View Playba Besic Information Time Device Name Device Name Device Name Device Name Device Name Serial No. Firmare Version Rubor Version Number of Name for Number of Name for Number of Name for Number of Name Notput Number of Name Notput	Lacit yield	Update	Conf قسمت ۱۳	figuration
	Actpage/config any Live View Playba Besic Information Time Device Name Device Name Device Name Device Name Device Name Seral No. Firmware Version Ricoling Version Web Version Number of HoDs Number of HoDs Number of Alarm Input Number of Alarm Colput	L.S.LIS C. PICINICAL N.C. Configuration xit Picture xit Picture xit Rista xit	Urdate	Conf قسمت ۱۳	figuration
http://192166.33.21/4 VISION Local System Settings Maintenance Camera Management User Management Storage Levent Storage Vehicle Detection VCA	bolgangeroomfig ange Live View Playba Besic Information Time Device Name Device Name Device Name Device Name Device Name Serail No. Errosario Version Web Version Number of Channels Number of Channels Number of Channels Number of Alarm Input Number of Alarm Input Number of Alarm Input	L. SLUC Y CHIGURAION PICLIC CONFIGURATION Setting R322 R548 Meru Output Network Video Recorder 255 DS-7716NI-E4 DS-7716	Update	Conf قسمت ۱۳	figuration



Е

سپس وارد قسمت Time settings شوید.

(e) (e) http://192.168.33.21/	Joc/page/config.asp	fî ★ 5
HIKVISION	Live View Playback Picture Configuration	👤 admin 🚯 Help 🛛 E+ Logout
🖵 Local	Basic Information Time Settings RS232 RS485 Menu Output	
System	Time Zone (GMT+08:00) Beijing, Urumqi, Singapore 🗸	
System Settings	NTP	
Maintenance Camera Management User Management	O NTP Server Address NTP Port 123	
C Video/Audio	Interval 60 min	
image ≝ Event Storage	manual rate sync. @ Manual Time Sync. Device Time 2018-01-14T23-38.49 Set Time 2018-01-14T23-38.43 [] ⊆) Sync. with computer time	
Vehicle Detection	DST	
	Enable DST Start Time Jan V First V Sun V 00 V End Time Jan V First V Sun V 00 V DST Bas 30min V	
	6Hikkision Digital Technology Co., Ltd. All Rights Reserved.	

در قسمت manual time sync و در بخش set time تاریخ و ساعت را با ساعت و تاریخ کامپیوتر خود همزمان

کنید و تیک sync with computer time را بزنید. دقت داشته باشید که تاریخ و ساعت کامپیوتر شما درست و

(=)®	http://192.168.33.21/doc/p ///SION L	age/config.asp ive View Play	P - C S Config back Picture	Configuration			_		Ladmin 🕑 Help	n ★ ¤ E• Logout	
	ocal	Basic Information	e Settings RS232	RS485 Menu Output							
🗆 s	ystem	Time Zone	(GMT+03:30) Tehra	n	~						
M	aintenance	NTP									
ci	amera Management	O NTP									
	ser Management	NTP Port	123								
© N	letwork	Interval	60	min							
₽6 ∨	ideo/Audio	Manual Time Sunc									
LA In	nage	Manual Time Sync.									
() E	vent	Device Time	2018-01-14T23:39.4	2							
🗎 s	torage	Set Time	2007-01-11T04:40:2	0 📆 🖌 Sync. w	vith computer time						
R v	ehicle Detection	DET									
K 6 V	ĊA	Enable DST									
		Start Time	Jan 🗸 First	✓ Sun ✓ 00	~						
		End Time	Jan 🗸 First	♥ Sun ♥ 00	\sim						
		DST Bias	30min		~						
		PROFESSION OF STREET, STRE									
		🗎 Save									
				0	DHikvision Digital Technol	logy Co., Ltd. All Rights	Reserved.				
e.com											
				11.00	1. 100 Y 100	10.114		0.00000	1000 1000		
				ايران	ن از فروش در	خدمات پسر	HII، اموزش و	ری VISION	^ی نظارت تصو	ں توزیع تجھیزاد	ط اقزار نماینده رسم
		1000	and the second second								



سپس دکمه save را کلیک نمایید.

V//S/D/V Lve Vew Pistycack Picture Configuration L of all Basic Information Time Settings RS22 RS44 Manu Output System Time Sore (GMT+4330) Tehrain V System Settings NTP Marthemarke O NTP Camera Management Server Address User Management Image Watch Lange Manuel Time Sync: Basic O NTP Server Address Image Watch Lange Manuel Time Sync: Basic Def/ce Time Strate 2007-01-11T04.40:36 Vanke Set Time Vanke Def/ce Time Strate 2007-01-11T04.40:36 Strate Cambe Synt: with computer time	http://192.168.33.21/c	loc/page/config.asp 🔎 - C 🕲 Configuration 🗙	n *
Basic Information Time Settings RS 222 RS 485 Mento Output Image: Product Time Zone (GMT+03.30) Teleran Image: Product Imag	KVISION	Live View Playback Picture Configuration	上 admin 👩 Help 🕞 Logout
Time Zone (dMT+03 30) Telvan System TTP Martence O TF Camera Management Server Actes O TP Server Actes Camera Management Server Actes Vector Management Server Actes Marten Marten Server Actes Marten Marten Server Actes Marten Marten Server Actes Marten Marten Server Actes Stand Time Sync Server Actes Vector Detector Server Actes Server Actes Stand Time X Server X Server X) Local	Basic Information Time Settings RS232 RS485 Menu Output	
System Settings NTP Marienzaria O.NTP Camera Management Server Adress Verkonk Total Network Boild Verkonk Boild Boild Boild Verkonk Boild Boild	System	Time Zone (GMT+03:30) Tehran 🗸	
Maiterance NTP Canara Management Sarver Adores Imagement NTP Port 123 Network Imagement NTP Port 123 Imagement Northown Imagement <	System Settings	NTP	
Network Indexa/life 60 mm Vacau/Juck Maxima Time Sync. Image Image </td <td>Maintenance Camera Management User Management</td> <td>O NTP Server Address NTP Port 123</td> <td></td>	Maintenance Camera Management User Management	O NTP Server Address NTP Port 123	
Manual Times Sync. Event @vd.nual Times Sync. Event @vd.nual Times Sync. Storage Set Time 2007-01-11704:40.39 Vencle Detection 0057 VCA Start Time	Network Video/Audio	Interval 60 min	
	Image	Manual Time Sync.	
Darket time 2007-01-11104-40.38 Vehicle Detection Dst VCA Dst Start Time Jan First Sur	Event	Manual Time Sync.	
VCA DST □ Enable DST Start Time Jan V First V 00 ✓	Storage	Device time 2007-01-11104:40.39 Set Time 2007-01-11104:40.39	
□ Enable DST Start Time Jan ♥ First ♥ Sun ♥ D0 ♥	Venue Detection	DST	
Start Time Jan V First V Sun V 00 V	VCA	Enable DST	
		Start Time Jan V First V Sun V 00 V	
End Time Jan V First V Sun V 00 V		End Time Jan V First V Sun V D0 V	
DST Blas 30min V		DST Blas 30min 🗸	
		Relation Field Technology Co. 101 (ED)INT Descent	Save succeeded
Save succ		senivasion bigitai rechnicityy Co., Lat. Aa Pagnis Reserved.	

توجه: تنظيم ساعت با استفاده از NTP، نياز به معرفي سرور NTP به دستگاه دارد كه با فعال كردن گزينه NTP و

وارد کردن آدرس سرور پیاده سازی می شود. - ⊡ × A ★ Ø (-) (-) http://192.168.33.21/do E+ Logout Picture Configuration 1 admin 🚯 Help Basic Information Time Settings RS232 RS485 Menu Output Q Local Time Zone (GMT+03:30) Tehran System System Settings NTP Maintenance O NTP Camera Mana Server Address User Mana 123 NTP Port Network (60 min Interval C. Video/Au Manual Time Sync. 🔝 Image Manual Time Synce Event Device Time 2007-01-11T04:40:38 Storage 2007-01-11T04:40:39 💮 Sync. with computer time Set Time R Vehicle Det DST Co VCA Enable DST Start Time Jan 🗸 First 🗸 Sun 🗸 00 🗸 End Time Jan 🗸 First 🗸 Sun 🗸 00 🗸 DST Bias 30min 🗸 Save succeeded.



پارس ارتباط افزار نماینده رسمی توزیع تجهیزات نظارت تصویری HIKVISION، آموزش و خدمات پس از فروش در ایران

HIKVISION Ptp-link MikroTik ONRP / SLIS QAUS electronics @SEAGATE See Fat, do Further Western Digital. / SRock HILOOK MERCUSYS Odigived Ooffos





نحوه تنظیم ساعت و تاریخ از طریق GUI دستگاه



وارد قسمت configuration شويد.





پارس ارتباط افزار نماینده رسمی توزیع تجهیزات نظارت تصویری HIKVISION، آموزش و خدمات پس از فروش در ایران

HIKVISION Ptp-link Mikrotik ONRP /SLIS QAUSelectronics @SEAGATE See Far, Go Further Western Digital, /SRock Hill COK MERCUSYS Odigived Offos ً هایک ویژن تهران



گزینه Date Format گزینه ای است که بوسیله آن می توانید نحوه نمایش تاریخ دستگاه خود را انتخاب کنید.

		Configuration
Seneral	General DST Settings Mo	ore Settings
Network	Language	English
VELWOIN	Output Standard	PAL
Alarm	VGA/HDMI Resolution	1280°1024/60HZ
I he Menu	Time Zone	(GMT+03:30) Tehran
LIVE VIEW	Date Format	MM-DD-YYYY
Exceptions	System Date	YYYY-MM-DD
Usar	System Time	MM-DD-YYYY
	Mouse Pointer Speed	DD-MM-YYYY
	Enable Wizard	
	Enable Password	

در قسمت system date تاریخ میلادی را روی دستگاه تنظیم کنید.

		Configuration	
General	, General DST Settings Mo	re Settings	
Network	Language	English	
	Output Standard	PAL	
Alarm	VGA/HDMI Resolution	1280*1024/60HZ	
> Live View	Time Zone	(GMT+03:30) Tehran	
	Date Format	MM-DD-YYYY	
Exceptions	System Date	10-06-2019	
user	System Time	18:37:14	
	Mouse Pointer Speed		
	Enable Wizard		
	Enable Password		
		Ar	Diy Back



پارس ارتباط افزار نماینده رسمی توزیع تجهیزات نظارت تصویری HIKVISION، آموزش و خدمات پس از فروش در ایران







در پایان، در قسمت system time ساعت را تنظیم کنید و سپس گزینه Apply را بزنید.

Sector Manager		Configuration	
General	General DST Settings Mo	pre Settings	
B Network	Language	English	
- Henreik	Output Standard	PAL	
Alarm	VGA/HDMI Resolution	1280°1024/60HZ	
e Live View	Time Zone	(GMT+03:30) Tehran	
	Date Format	MM-DD-YYYY	
Exceptions	System Date	10-06-2019	
at User	System Time	18:37:14	
	Mouse Pointer Speed	18 🗘 : 37 🗘 : 14 🗘	
	Enable Wizard		
	Enable Password		



www.pars-e.com



پارس ارتباط افزار نماینده رسمی توزیع تجهیزات نظارت تصویری HIKVISION، آموزش و خدمات پس از فروش در ایران

HIKVISION Ptp-link Mikrotik ONRP /SLS QAUSelectronics @SEAGATE Western Digital, /SRock Hill@OK MERCUSYS @ digivod noffos



See Far, Go Further



شرکت پارس ارتباط افزار پیشرو در ارائا، سیستمهای نظارت تصویری و سایر تجهیزات فناوری اطلاعات دفتر مرکزی: نهرزن، خیابان ولیعصر، خیابان زعفراکید، خیابان اعجازی (آصف)، ساختمان ۳۹ مرکز آموزش و خدمات پس از فروش: تهران، خیابان شهید بهشتی، خیابان سرافراز، کوچه سوم ساختمان ۱۲ تلفن: ۹۵ ۹۳ ۸ – ۲۱ - (داخلی ۰)